


# Sled Kite

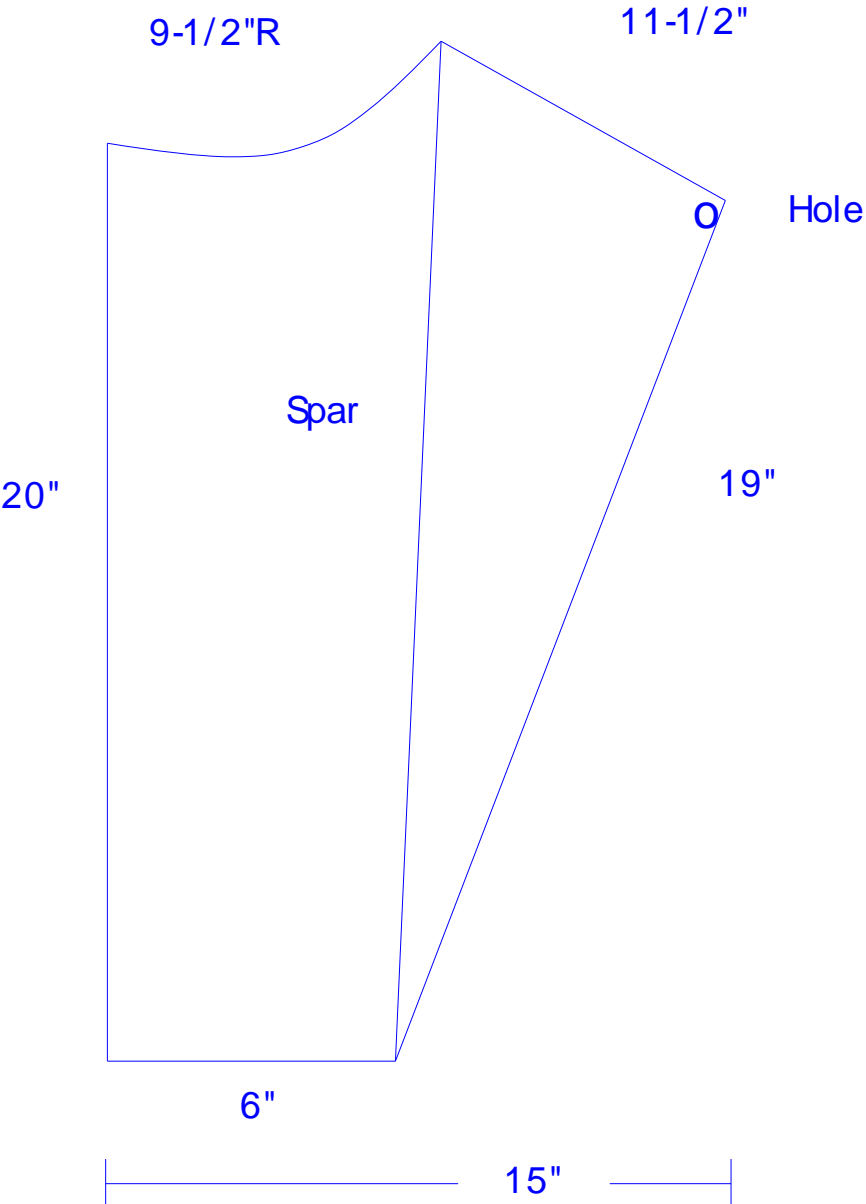

Lay a plastic trash bag flat out on a table  
Make a cardboard template or measure and cut. The 20" line goes along the folded edge of the trash bag.

Open out the trash bag and lay the full kite pattern flat on the table.

Tape two  $\frac{1}{8}"$  dowels on the spar lines.

Tape the corners marked HOLE and punch holes for the bridle string.

Tie a 60" piece of string, each end to the holes to make the bridle.

Hold the loop of the bridle so the kite hangs at a 20 to 30 degree angle to the floor.

Attach the tow line here and you are ready to fly your sled kite.